

# evo<sup>®</sup> DI

Smart dry ice shipper with superior thermal performance

The evo DI is an industry leading reusable shipper with a patented technology that reduces the amount of dry ice needed and minimizes temperature stratification as the dry ice sublimates.



Convenient, easy to use and thermally efficient.

## Pack

Packout is easy and error proof. Simply fill the frame with dry ice pellets and load samples straight from your freezer.

## Ship

The aircraft-grade proprietary plastic exterior and high-tech nanoporous thermal insulation material is qualified to keep your valuable payload safe and stable.

## Track

Track your shipment from any Internet connected device.


## Reusable

More durable than traditional styrofoam shippers, built to be reused.



# Smart cold chain management. Secure and compliant.

The evoIS™ web application for evo Smart Shippers provides ongoing visibility to payload condition. Get information anywhere, anytime. Set up notifications so you never miss a critical event.

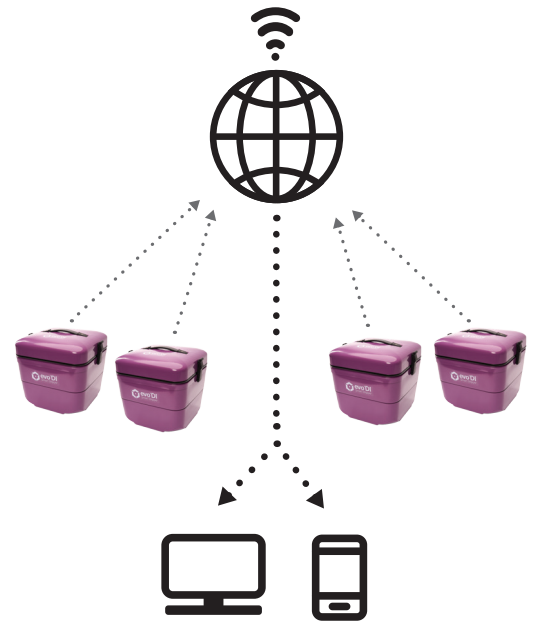

- Track location, temperature, battery, box open, tilt and more
- Customizable threshold configuration and alert notifications allows timely intervention
- 21 CFR Part 11 compliant

## Specifications

<b>Hold Time</b>	Static: 72 hours, re-ice possible
<b>Hold Temperature</b>	≤ -60°C
<b>Temperature Management</b>	Dry ice pellets
<b>Payload Volume</b>	Small Payload Rack: 3.94 × 4.08 × 2.64 in Standard Payload Rack: 5.24 × 5.30 × 1.88 in or (1) 81-96 microvial cryobox Large Payload Rack: 6.56 × 4.28 × 2.69 in
<b>Configurable</b>	Yes
<b>Shipper Size</b>	15 in x 14 in x 13 in
<b>Packaging Dimensions</b>	16.6 in x 16.5 in x 17.25 in
<b>Weight Shipper only:</b>	13 lbs. (5.9 kg) Ready to ship: 27.6 lbs. (12.5 kg)

3303 Monte Villa Parkway, Suite 310  
Bothell, WA 98021 USA

1.866.424.6543 Phone | 1.425.402.1433 Fax  
BioLifeSolutions.com

SS-evo-220233\_R02